



SPEED GRIP G

INSTRUCTIONS

www.ianbfoto.com

BRONICA CO., LTD.

2-11 Shin-Ogawamachi Shinjuku-ku, Tokyo 162, Japan

Telephone: Tokyo (03) 267-0211


Cable Address: "BRONICA TOKYO"

Telex Call No. 0232-2096 BRONC J

The Speed Grip G has been specifically designed and developed as an integral accessory for the Zenza Bronica GS-1 single lens reflex camera. When attached on the film winding crank side of the camera main body, the camera can be held with the right hand only, as well as permitting thumb-stroked film winding and shutter release action with the film winding lever and shutter release button on the grip, thus leaving the left hand free for focusing the lens. Furthermore, when the Speed Light G1 is used on the hot shoe, there is also auto-flash control with direct metering at the film surface. And, when used in combination with eye-level type finders, there is shooting speed and handling ease comparable to the smaller 35mm single lens reflex for taking both horizontal and vertical formats.

To get best results from the Speed Grip G, please read the instruction manual carefully before you even touch the accessory, as this will increase your pleasure in using it.

Name of Parts

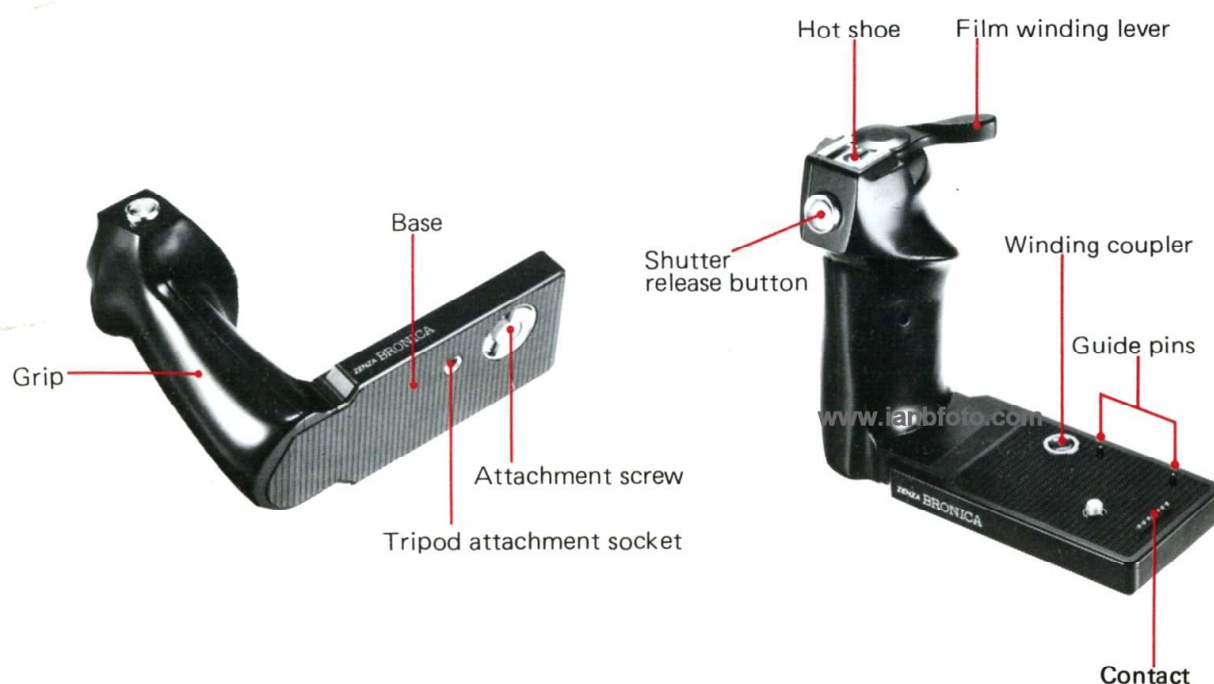


1 Attaching the Speed Grip G



A. Detach the film winding crank from the camera main body. Pull the release lever on the base of the film winding crank assembly outwards and, at the same time, rotate the base in the counter-clockwise direction until the assembly comes off.

After removal of the film winding crank, place the dust protection cover comes together with the accessory.

②

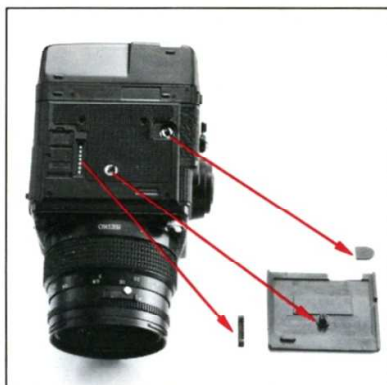


B. Take off the cover of the base, winding coupler and flash synch contact from the base of the camera main body.

* Always replace the covers of the winding coupler and flash synch contact, when the Speed Grip G is not being used.



C. Place the camera main body on the base of the Speed Grip G, with the guide pins on the accessory aligned to the accessory mounting sockets on the camera base, as well as meshing the winding couplers on the accessory and camera base.


2 Operations

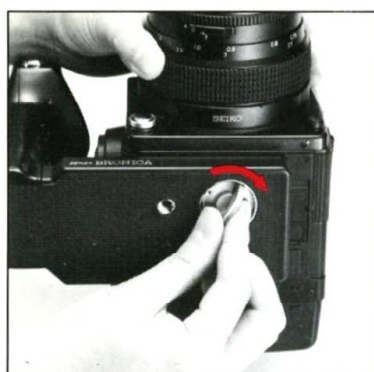

D. Finally, tighten the attachment screw on the base of the accessory and connect the two together securely.




A. The film is advanced and the shutter charged, with the film winding lever of the accessory, which is stroked two times and has a 45° play. The lens shutter is released with either electro-magnetic shutter release button on the grip or camera main body.

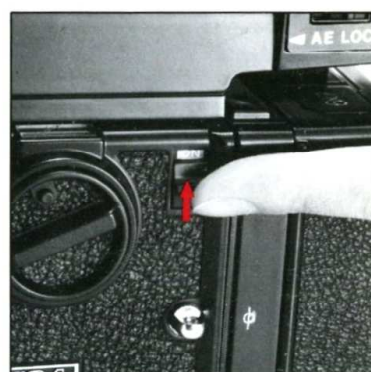

B. The shutter release buttons are locked against accidental use, by pushing up (OFF) the main switch on the camera main body.

3 Detaching the Accessory

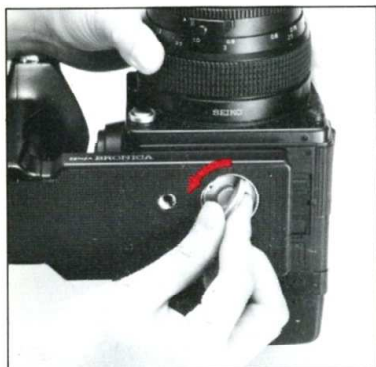

The accessory can be detached, by simply loosening the attachment screw on the base of the accessory.

* Replace the covers of the winding coupler and flash synch contact, as well as base, on the bottom surface of the main body, at the same time.

4 Hot Shoe



A. The accessory shoe is a hot shoe which can be used for cordless attachment of the Speed Light G1 with a matching dedicated contact.

* The hot shoe cover on the accessory shoe must be taken off for using the Speed Light G1.

B. When the Speed Light G1 is used on the hot shoe, there is auto-flash control, with direct measurement of the light at the film surface. Read the instructions for the Speed Light G1 on its use.

④



* When using electronic flash units, other than Speed Light G1, check operations first before using them in the manual mode if there are dedicated contacts besides the X-synch contact.

