

Mamiya RB & RZ adapters for digital backs

Silvestri offers two adapters that allow photographers using Mamiya's RB67 and RZ67 medium format cameras to convert their equipment into high-end digital cameras.

Machined to exactly the same focal plane as a conventional Mamiya film back, the Silvestri RB/RZ67 adapters require no modifications to the camera.

To provide interfacing between the Digital Back and Mamiya RB67 camera body, the communication cable must be plugged into the lens flash sync terminal. This allows the digital back to be activated when the shutter release button is depressed.

Shooting data such as aperture, shutter speed, etc. will NOT be shown on the metadata files because there is no direct interface between camera, lens and digital back.



How to attach the adapter to the Mamiya RZ67 body:

Pull the silver knob (02) on the bottom of the adapter and shift it to the right. This operation opens completely the 4 holes of the adapter (01).

Align the 4 knobs of the Mamiya camera back with the 4 holes of the adapter (01) then press the adapter in place.

Lock the adapter by pulling and shifting the silver knob (02) to the left. Unpull the knob and slitly move it left and right until it finds its lodging.

Works with all digital backs with Hasselblad V attachment.

With Hasselblad digital backs: single shot mode only (no multishot).





With Phase One backs

All PhaseOne digital backs (except for the P40 and P65+) will mount and fire in 2-shot mode. With the use of the Phase One wake-up cable (Item # 50300131) the digital back will operate in one-shot mode.

- 1. Make Lens settings
- 2. Mount Digital back
- 3. Attach Wake-Up cable
- 4. Cock the shutter
- 5. Press the button on the Wake-Up cable
- 6. Press the plunger on the shutter-release cable and exposure is made.

Specifications

Weight: 145 gr.

Dimensions: $11.3 \times 13 \times 1.5$ cm.

N°2 for M2



How to attach the adapter to the Mamiya RB67 body:

Pull the silver lever on the bottom of the camera body.

Align the 4 holes of the Mamiya camera back with the 4 knobs of the adapter (01), the silver pin has to be on the bottom rigth side, then press the adapter in place.

Lock the adapter by pressing the silver lever on the bottom of the camera body.

Works with all digital backs with Hasselblad V attachment.

With Hasselblad digital backs: single shot mode only (no multishot).

with Phase One backs: single shot mode. No need of wake up cable.

Specifications

Weight: 164 gr.

Dimensions: 10,5 x 10,5 x 1,5 cm.

