


TESTING TO SEE IF THE CAMERA FUNCTIONS PROPERLY

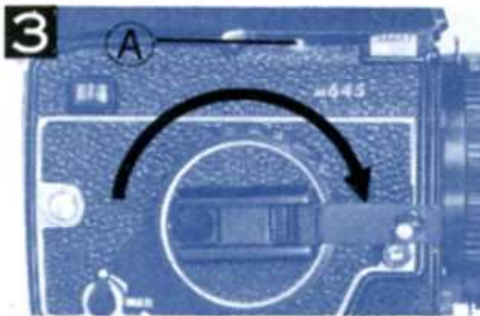

1. Insert a battery into the camera.

2. Set the shutter speed dial to any position other than \odot .

3. Turn the film advance crank until it stops.

4. Make sure that the shutter release button is not locked by aligning the white dots of the shutter release lock ring and camera body. Then release the shutter.

5. After 15 exposures, open the camera back cover. Remove the film insert and the exposure counter will return to "S".

CAUTION

- If the shutter is released without a battery in the camera, the mirror will lock in the up position. To return the mirror to its normal position, depress the battery check button (A) deeply.

- The mirror will also lock in the up position if the shutter is released with the shutter speed dial set to \odot . To lower the mirror, turn the shutter speed dial in either direction (B or 1/500 sec.).