



## WAIST-LEVEL FINDER G

### INSTRUCTIONS

The Waist-Level Finder G has been specially designed for exclusive use with the Zenza Bronica GS-1 camera, and is interchangeable with other finders. The compact and light-weight finder is folded up when not in use and weighs only 100 grams. It has a flip-up magnifier for critical focusing of the central area.

Because of its waist-level viewing, the finder is very convenient for close-up, copy work and other low-angle photography. The finder field is  $52.3 \times 64.9\text{mm}$  (or  $94\% \times 94\%$  of the actual picture area) while magnification (with the standard 100mm lens) is 1.5x.

For the care and maintenance of the accessory, please refer to the instruction booklet of the GS-1 camera.

#### 1 Attachment / Detachment of the Waist-Level Finder G.




A. To detach the finder or the finder cover on the camera body, simply depress the finder release button, while, at the same time, sliding the finder or finder cover backwards where it can be taken off.



B. To attach the Waist-Level Finder G, simply align the front end of the finder with the finder frame (the shiny square frame on top), as illustrated. Then, gently lower the finder and, when well-seated, slide forward until it locks into place.

C. To detach the Waist-Level Finder G, simply follow instructions in "A".

## 2 Viewing and Interchanging Magnifiers.

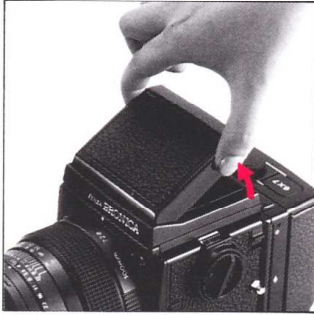

A. The focusing hood of the waist-level finder is opened by pulling up the focusing hood while holding the groove at its right and left ends, as illustrated.




B. The magnifier is flipped up into viewing position, by simply sliding the release lever in the arrow-indicated direction.  
To store the magnifier, simply push it down until it catches.




C. To close the focusing hood, first, push down the magnifier (if it is in viewing position). Next, press in both side frames, as illustrated, and, at the same time, press the front frame back towards the rear.  
The focusing hood will be automatically folded down.


## 3 Finder Display.

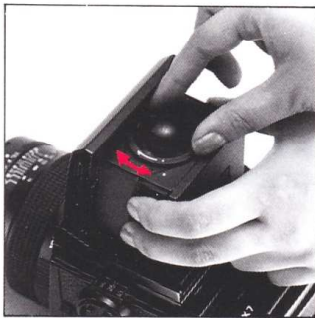

D. The standard magnifier supplied with the waist-level finder has a power of  $-1.5$  diopters, which can be exchanged with other optional magnifiers with powers of  $-4.5$  to  $+2.5$  diopters. Simply rotate the magnifier frame in the counter-clockwise direction to remove. To attach the magnifier, match the white marks and rotate the magnifier frame about  $30^\circ$  in the clockwise direction.

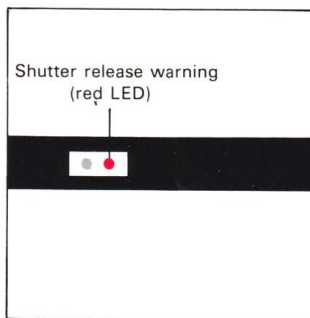

By stroking the shutter release button halfway, shutter release warning red LED and flash ready green LED illuminates in the finder display as the case may be.  
For detail, please refer to "14. Shutter Release Button" of GS-1 camera instruction booklet and the instruction booklet of the Speed-Light G1.

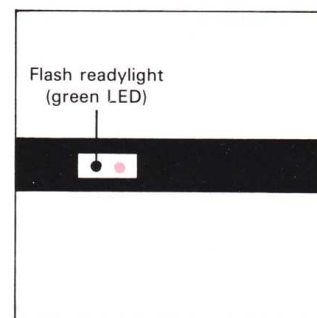

**TAMRON**

**TAMRON CO., LTD.**

<Overseas Sales Dept>

17-11, 7-chome, Takinogawa, Kita-ku, Tokyo 114-0023, Japan  
Tel:(03)3916-0131 Fax:(03)3916-1860