

BRONICA CO., LTD.

5-3, Bijogi-Higashi2-chome, Toda-shi, Saitama-Pref. 335 Japan
Telephone: (0484)22-0003
Cable Address: "BRONICA WARAB"
Telex Call No. 02962733 BRONC J
Fax: (0484)21-2413



SPEED GRIP S

www.ianbfoto.com

INSTRUCTIONS


Printed in Japan
E31182 C

Name of Parts


The Speed Grip S has been specifically designed and developed as an integral accessory for the Zenza Bronica SQ single lens reflex camera and, when attached, provides the camera with shooting speed and handling ease comparable to the smaller 35mm single lens reflex camera, especially when used in combination with eye-level type finders.

When attached on the film winding crank side of the camera body, the camera can be held with the right hand only, as well as permitting thumb-stroked film winding and shutter release action with the film winding lever and shutter release button available on the grip, thus leaving the left hand free for focusing the lens.

To get best results from the Speed Grip S, please read the instruction manual carefully before you even touch the accessory, as this will help increase your pleasure in using it with the Zenza Bronica SQ and its eye-level finders.

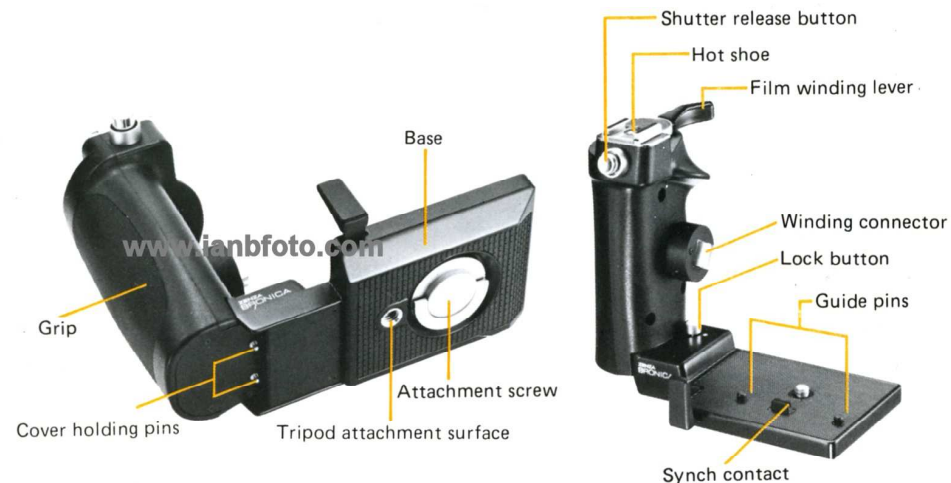

1 Attaching the Speed Grip S

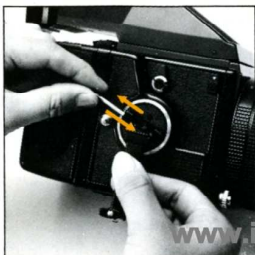


A. Pull out the film winding crank's attachment rod, while holding the film winding crank with the other hand. Then, pull off the crank. Finally, slip the attachment rod back into position.



B. Take off the flash synch contact cover in the accessory mounting guide, on the base of the camera body. The detached cover should be fixed on the cover holding pins (see illustration) on the base of the accessory.

* The flash synch contact cover should always be returned to its place on the base of the camera body, when the Speed Grip S is not being used.

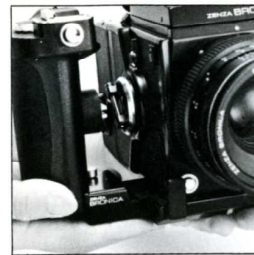

C. The camera body should be placed on the base of the accessory, after aligning the guide pins on the front end of the accessory's base to the accessory mounting guide on the base of the camera body.



D. Stroke the film winding lever of the accessory slightly so the winding connector is in position to mesh with the attachment rod of the film winding crank on the camera body. When aligned properly, push the accessory in fully so that the two engage.




E. Finally, tighten the attachment screw on the base of the accessory and connect the two together securely.

2

3

2 Operations

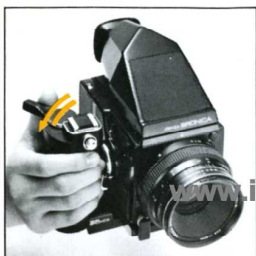


A. The film is advanced and the shutter charged, with the film winding lever of the accessory, which is stroked about 120° two times. The lens shutter is released, by stroking the shutter release button on the grip.




B. The shutter release button can be locked against accidental uses, by sliding the lock button towards the back cover side, i.e., aligning to the red dot.

3 Detaching the Speed Grip S

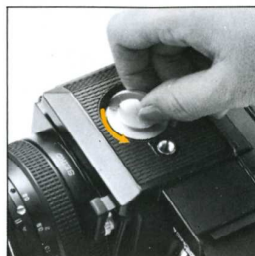

The accessory can be detached from the camera body, by simply loosening the attachment screw on the base of the accessory.

4 Hot Shoe

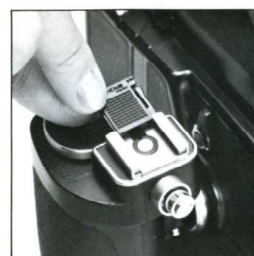

A. The hot shoe on the accessory can be used for cordless attachment of electronic flash units with suitable terminals.

B. The black hot shoe cover must be detached, for attaching the cordless electronic flash unit, and should be replaced when not using the electronic flash unit.



4

5