



INSTRUCTIONS TO FIT THE ADAPTER FOR THE DIGITAL BACK ON A BRONICA SQ 6X6




SILVESTRI manufactures the intermedium adapter back to transform the Bronica SQ attachment into Hasselblad type attachment. This makes the use of digital backs on Bronica SQ cameras possible.



The image to the left shows how to fit the Silvestri adapter cod. 7008.

 Use the provided pin to unlock the volè's feeler pin in the following way: holding pressed the unlocking button of the film holder, push with the pin the feeler pin and hold it pushed.

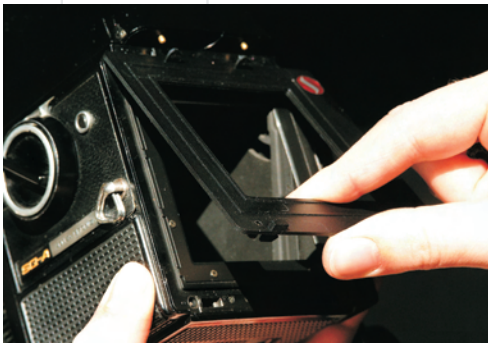

With the button still pushed insert the adapter first at the top then draw it close to the camera until their contact. Then release the button.

Before mounting any accessory make sure the back is perfectly placed and fastened to the camera. After this operation, it is possible to use digital backs with Hasselblad type attachment.



To remove the adapter and to bring the camera back to the original condition, insert the provided pin in the feeler pin hole (as shown in the image to the left), then, holding the unlock button pushed, remove the adapter back.

WARNING The intermedium adapter back is a high precision mechanical part and, considering its dimension, particularly delicate. Handle it with care to avoid damages.

To provide interfacing between the Digital Back and Bronica camera body, the communication cable must be plugged into the lens flash sync terminal. This allows the digital back to be activated when the shutter release button is depressed.

 
Shooting data such as aperture, shutter speed, etc. will NOT be shown on the metadata files because there is no direct interface between camera, lens and digital back.



INSTRUCTIONS ON HOW TO FIT THE DIGITAL BACK ON A BRONICA ETR 4.5X6



SILVESTRI manufactures the intermedium adapter back to transform the Bronica ETR attachment into Hasselblad type attachment. This makes the use of digital backs on Bronica ETR cameras possible.

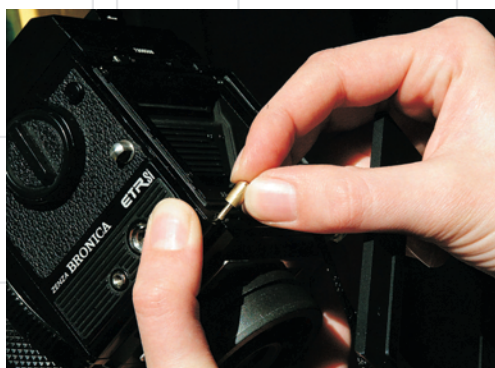

The image to the left shows how to fit the Silvestri adapter cod. 7010. Use the provided pin to unlock the volè's feeler pin in the following way: holding pressed the unlocking button of the film holder, push with the pin the feeler pin and hold it pushed.



With the button still pushed insert the adapter first at the top then draw it close to the camera until their contact. Then release the button. Before mounting any accessory make sure the back is perfectly placed and fastened to the camera. After this operation, it is possible to use digital backs with Hasselblad type attachment.



To remove the adapter and to bring the camera back to the original condition, insert the provided pin in the feeler pin hole (as shown in the image to the left), then, holding the unlock button pushed, remove the adapter back.

WARNING The intermedium adapter back is a high precision mechanical part and, considering its dimension, particularly delicate. Handle it with care to avoid damages.

To provide interfacing between the Digital Back and Bronica camera body, the communication cable must be plugged into the lens flash sync terminal. This allows the digital back to be activated when the shutter release button is depressed.

Shooting data such as aperture, shutter speed, etc. will NOT be shown on the metadata files because there is no direct interface between camera, lens and digital back.