



## FOR MAMIYA M645 (M45)

TELEPLUS for Mamiya M645 is provided with a coupling pin and a claw which couple with the TTL metering when the PD Prism Finder is in use.

### ★ LENS INTERCHANGE

#### 1. Removing the camera lens

Turn the lens counterclockwise by depressing the lens release button on the camera body.

#### 2. Mounting the TELEPLUS

Mount the TELEPLUS, aligning the mounting index mark (body side) of the TELEPLUS and the index mark of the camera body. Then turn the TELEPLUS clockwise until the release button snaps closed.

#### 3. Mounting the camera lens

Align the red dot on the TELEPLUS (camera lens side) and the mounting index mark of the camera lens. If the TTL coupling pin hits the AM lever or the TTL claw on the camera lens, do not force to turn the lens. Adjust the position of the coupling pin by moving the coupling ring (on the rear of the TELEPLUS) in either direction. Then turn the camera lens fully clockwise until it locks into place.

#### ★ Make sure that the TTL coupler is set securely.

When the PD Prism Finder is in use, set the coupling pin of the TELEPLUS into the claw on the camera lens. It can be done by turning the coupling ring of the TELEPLUS towards the claw of the camera lens. When the lens aperture is set at the full-opening or at the smallest opening, the

TELEPLUS coupling pin fails to reach the claw. In that case, move the coupling ring close to the claw and turn the aperture scale ring towards the coupling pin to set into the claw.

It may happen to couple instantly at the time of mounting if the coupling pin was already in the right position. In that case, no adjustment is necessary.

#### 4. Detaching TELEPLUS and the camera lens

Remove the TELEPLUS and the camera lens in the reverse way you mount them.

### CAUTION

1. When eye-level prism finder or waist-level finder is in use, exposure increase of 2 f-stop value is necessary.
2. When attaching the TELEPLUS and the camera lens, make sure that are securely locked with a click sound.
3. When PD Prism Finder is in use, the built-in TTL meter determines right exposure automatically by means of "full-aperture" method. Do it the same way as you use the camera lens alone. Check that the projecting pin is coupled with the claw.
4. Removing the lens cap  
The TELEPLUS<sup>1</sup> lens cap (camera lens side) is locked. To remove the cap, turn it counterclockwise by depressing the release button.

### NAME OF PARTS

