


645E

Rapid Wind Grip GN401 巻き上げグリップ GN401

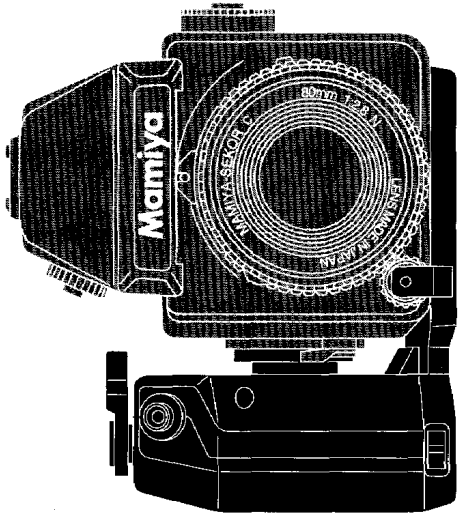

English Instructions 日本語 使用説明書

⚠ Caution

- Be sure to attach the grip securely to the body. If not, it could fall, resulting in injury or damage to the product.

Mamiya

100% Recycled Paper


Mamiya-OP Co., Ltd.

Specifications and appearance are subject to change without notice.

Printed in Japan
304712-BL-04JE

Congratulations on your purchase of the Mamiya the Rapid Wind Grip GN401.
The GN401 is a rapid wind grip equipped with a built-in trigger-type release. The grip stabilizes holding for hand-held shooting and offers highly maneuverable winding functions. With it, the film can be wound and the shutter can be set using the winding lever on the grip.

Names of Parts

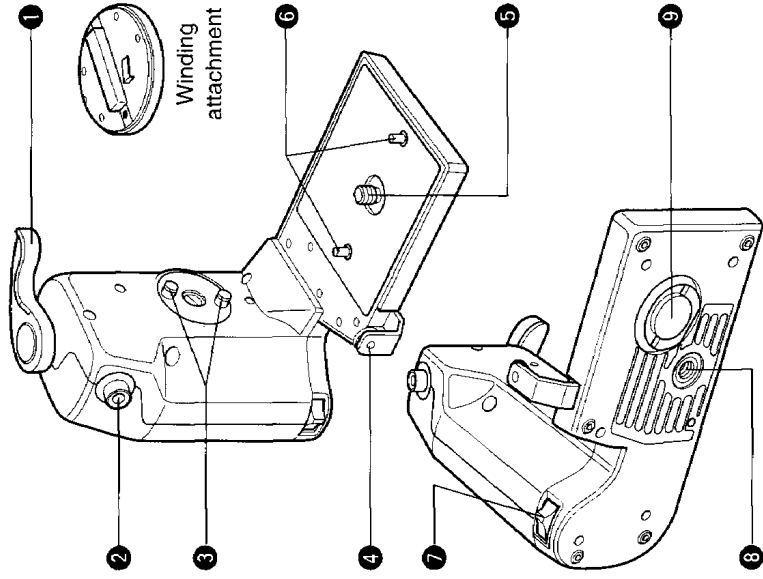

- 1 Winding lever
- 2 Shutter release button
- 3 Coupler pins
- 4 Shutter release lever
- 5 Camera mount screw
- 6 Positioning guide pins
- 7 Shutter release lock
- 8 Tripod screw hole
- 9 Camera mount handle

Caution


- To clean, wipe gently with a soft, dry cloth. Do not use detergent, it may cause discoloration of the surfaces.
- Never take the rapid winding grip apart or alter its structure.

Specification


- Winding system : Winding lever, 2 windings per frame (Ratchet type film Advance)
Winding angle : 140°
- Release : The camera's shutter release button is controlled mechanically by the shutter release button on the grip. Provided with cable release socket and shutter release lock mechanism.
- Dimensions : 142W x 111H x 85.5D mm
Weight : 340 g

Mounting the Rapid Wind Grip GN401


1. While pressing the camera mount handle **A**, remove the winding attachment **B** from the rapid wind grip.

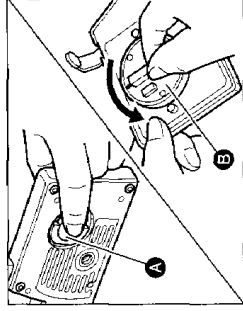


2. Turn the film winding crank handle counter-clockwise until it stops, then press in the crank handle release lever **C** and turn in the direction of the arrow to detach it.

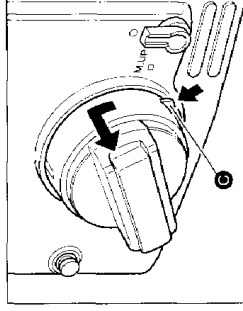

- ★ The film advance crank will not stop revolving unless film and/or an empty spool (in the take-up position) is loaded in the film insert. You may also set the multi-exposure switch to "MULTI" to attach the Rapid Wind Grip.

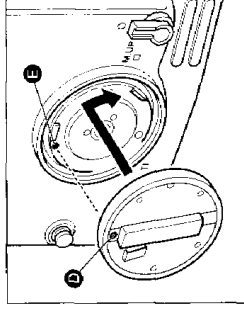


3. Line up the red dot on the winding attachment **D** with the red dot on the body **E**, then press the winding attachment against the body and turn clockwise to secure it.

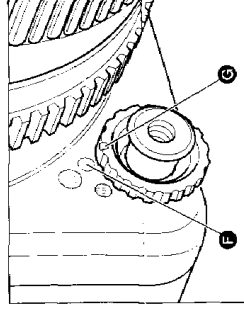


4. For normal operation set the White Dot of the Shutter Release Selector **F** against the White Dot **G**.



5. Operating the winding lever, mount in such a way that the rapid wind grip's coupler pins **H** engage with the projecting parts on the winding attachment **I**.

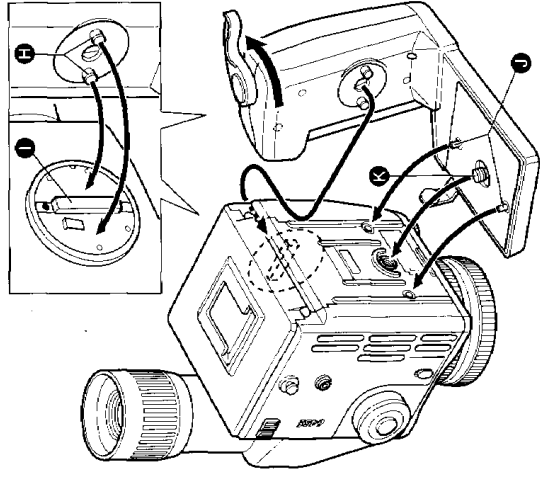


6. Line up the rapid wind grip's positioning guide pins **J** and camera mount screw **K** with the bottom of the camera, then turn the camera mount handle clockwise to secure.

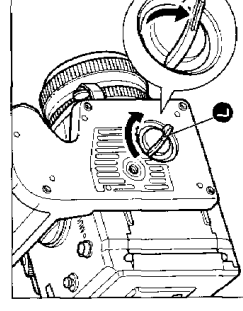


Operating the Rapid Wind Grip GN401


1. Operate the rapid wind grip's winding lever to advance the film and set the shutter.
★ The shutter cannot be released while the film is winding.

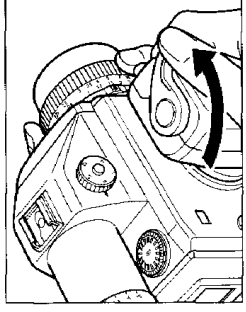

2. Turn the distance ring to adjust the distance, set the exposure, then press the rapid wind grip's shutter release button.

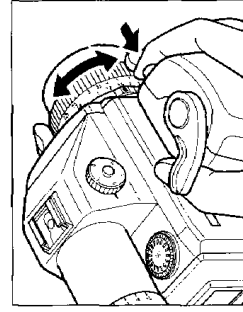


- ★ When not using the camera or when placing it in a bag, etc., set the rapid wind grip's shutter release lock **A** to the locked side (red).

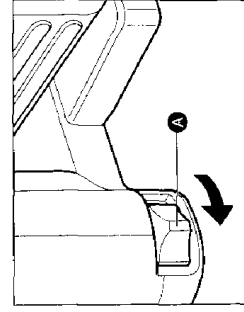


Removing the Rapid Wind Grip GN401


1. Wind the rapid wind grip's winding lever until it stops, then set the shutter.

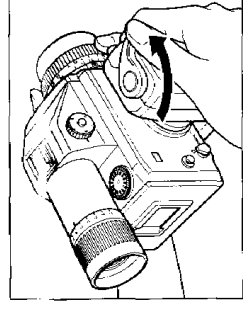

2. Loosen the camera mount handle **A** by turning it counter-clockwise, then detach the rapid wind grip from the body.

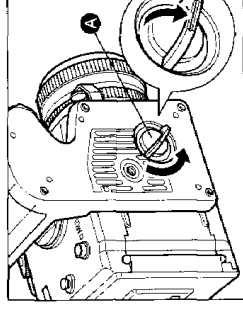

3. Loosen the winding attachment by turning it counter-clockwise, then detach the winding attachment from the body.

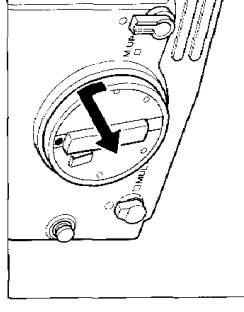

4. Line up the red dot on the crank handle **B** with the red dot on the body **C**, then press the crank handle against the body and turn clockwise to secure it.

