

**Mamiya**

## Mamiya Quick Shoe AQ701/AQ702

Instruction


Thank you for your purchase of MAMIYA products. It is recommended that you carefully read this instruction manual before use in order to become well accustomed to operating this product properly and make full use of its functions.

### Safety Cautions

**CAUTION** If the product is handled improperly, serious damage or injury to the equipment or user may occur.

- When installing or removing the quick shoe, be sure to hold the camera tightly.
- Confirm that the quick shoe is securely locked.
- Tripod must be strong enough for camera and lens. Do not carry the camera in conjunction with the tripod.


### Parts Description

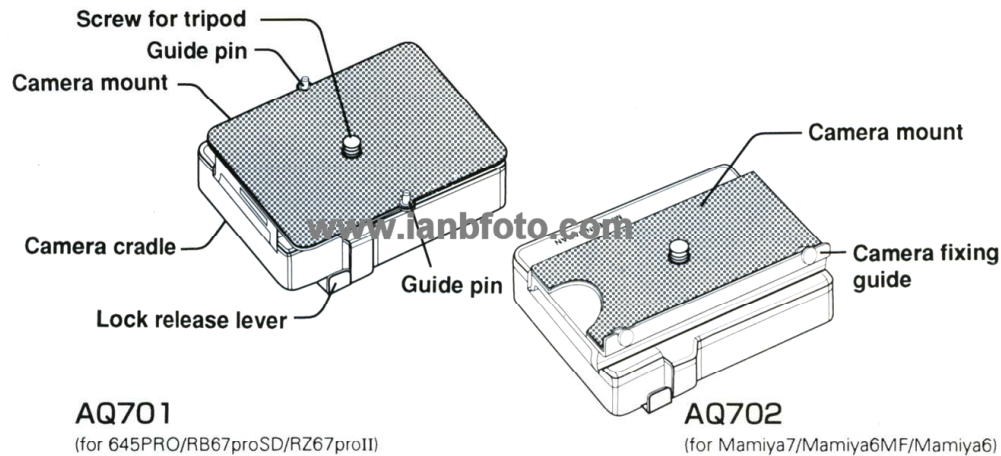

### Mounting /Dismounting Quick Shoe AQ701/AQ702


#### 1. To remove the camera mount:

Push the lock release lever of the camera mount following the arrow direction and remove the mount.

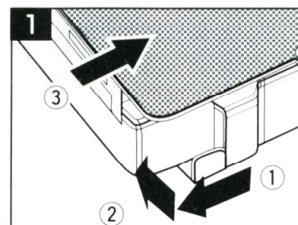

#### 2. Install the camera mount to the camera.


Turn the handle (A) of the camera mount and fix it to the camera.

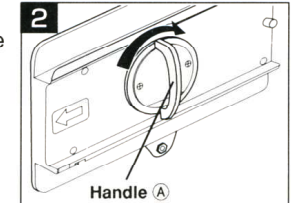

#### 3. Install the camera cradle to the tripod.

Turn the screw of tripod for camera and fix the camera cradle to the tripod.

- ☆ When using the large size tripod (3/8 inch size screw), remove the intermediate screw of the tripod and use. Remove the stopper screw (B) from the intermediate screw of tripod, and then remove the intermediate screw using coin or the like. (remove entire sentence).

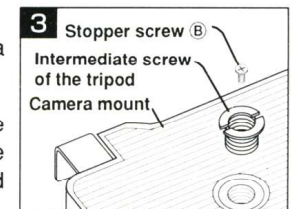

#### 4. Mount the camera on the tripod.

Fold the handle (A) of the camera mount, which was installed to the camera. Insert it to the cradle for camera and slide it. When the click sound is heard, the camera is fixed on the tripod.

- ☆ When mounting, be sure to coincide the direction of the arrow on the camera cradle to that of the camera mount.
- ☆ If the camera cradle stops halfway and it cannot be inserted, push the lock release lever again following the arrow and release the lock.
- \* **AQ702 (for Mamiya 7)**  
Push the back edge of the camera to the camera fixing guide and install.
- \* When using AQ702 and install to other cameras than Mamiya, remove 2 guide pins and then use.
- \* When you install Polaroid Pack Film Holder HP401 to the 645PRO and photograph using tripod, remove guide pin of the Quick Shoe, and use Tripod Adapter N or N2, and then photograph. These adapters are sold separately.

**Mamiya-OP Co.,Ltd.**