


SINGLE EXPOSURE ATTACHMENT

FOR THE MAMIYAFLEX Model C Professional

The MAMIYAFLEX Model C is provided with a special attachment which permits the taking of pictures on single separate pieces of cut film or photographic plate contained in the holders provided for this purpose. When taking portraits, or commercial, scientific, and industrial photographs which must be immediately processed, it is often far more convenient to use plates or cut film than the usual rollfilm which must normally be developed and processed as a whole.

NOMENCLATURE

1. Single-exposure adaptor
2. Adaptor release button
3. Plate holder catch
4. Plate (cut film) holder
5. Slide-cover
6. Plate carrier
7. Film clip
8. Lock-lever

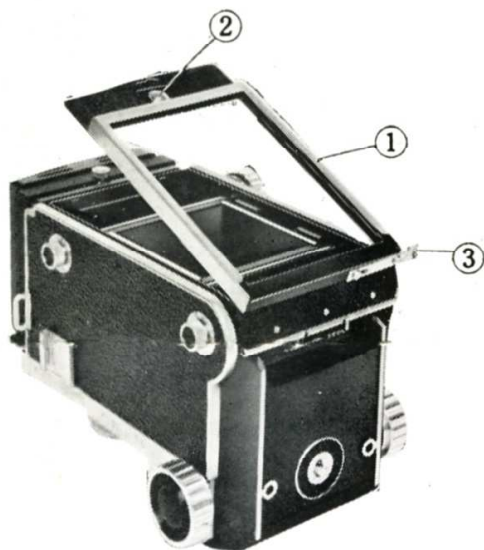

TO ATTACH SINGLE-EXPOSURE ADAPTOR

1. Remove regular backlid by unfastening backlid hinge and pulling out in usual manner.
2. Remove *without fail* the spool contained in the camera, then attach single-exposure adaptor.


TO LOAD PLATE (CUT FILM) HOLDERS



Remove slide-cover (5) of plate holder (4), erect lock-lever (8) and give one quarter turn. Plate carrier (6) will spring out to picture-taking position. When loading a plate, remove film clip (7) from plate carrier (Fig. 1). Gently slide plate into grooves of the plate carrier, emulsion side up (Fig. 2). After plate is securely in position pull lock-lever out, turn, and fold down over "E". Insert slide-cover.

WHEN USING CUT FILM, first position film, emulsion side up, on cut film clip (7), then secure clip on plate carrier in the same way as one would a plate (Fig. 3).

WHEN MAKING SINGLE EXPOSURES

1. Slide loaded plate holder (4) into grooves of the single-exposure adaptor (1), push fully home and secure with plate holder catch (3).

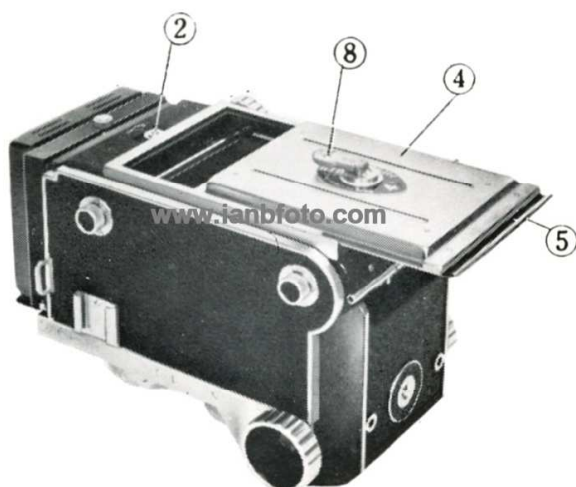

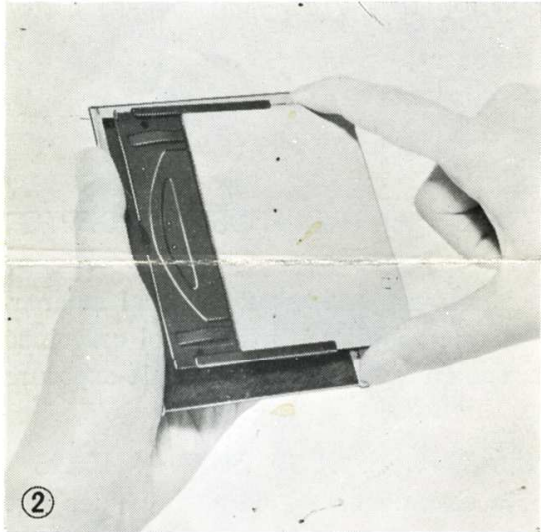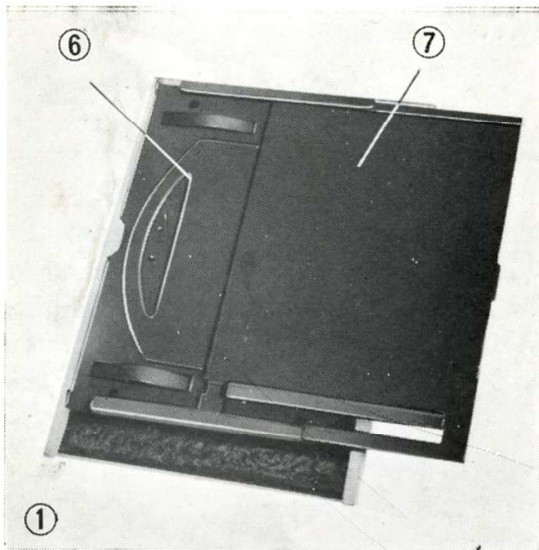

2. Pull out side-cover (5) then give lock-lever (8) a quarter turn to permit plate carrier to spring out, bringing the plate or film surface into the focal plane. Expose plate or film.

3. After exposure, pull out lock-lever (8), turn, and fold down over numeral. "E" will then indicate that the plate or film contained has been exposed (Fig. 4).

CAUTIONS

1. When using cut film, each piece will be exactly one-fourth of "cabinet" size ($6\frac{1}{2}'' \times 4\frac{3}{4}''$). A special cutter is available for quartering such sheet film.

2. When not in use, keep holder out of adaptor, and slide-covers out of holders to preserve push strips.

3. Upon loading holders, fold lock-lever upward over "E" and use numeral as reminder.

4. Loading and unloading of plate holders must be done in a darkroom. Loaded plate holders must be protected from direct sunlight, and must not be left exposed to bright light.

MAMIYA CAMERA CO., LTD.

No. 7, 1-CHOME, HONGO, BUNKYO-KU, TOKYO, JAPAN

