


Mamiya

M Adapter (Horizontal)

M Adapter (Vertical)

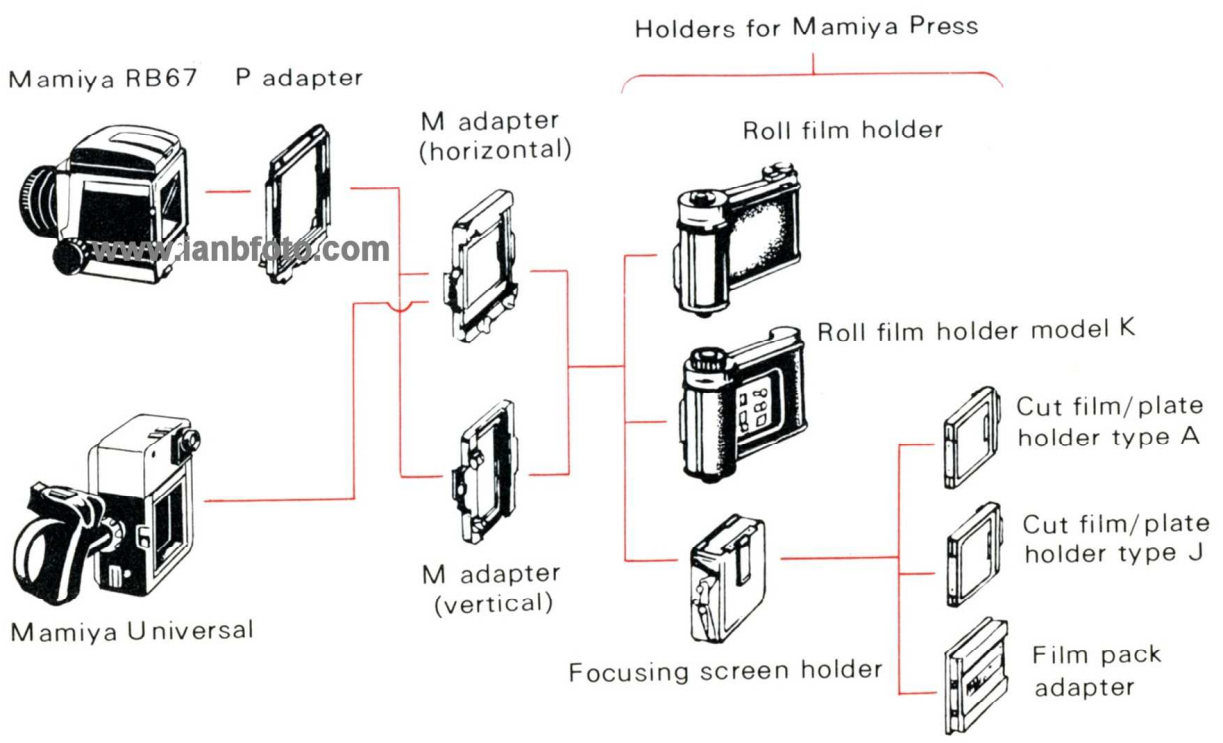

The M adapter (horizontal) and M adapter (vertical) are used for the Mamiya Universal Camera or Mamiya RB67 when photograph-

ing with them through holders for the Mamiya Press. These adapters can be used according to the following table.

	Camera	Purpose	Portion to be installed
M adapter (horizontal)	Mamiya Universal	Installation of holders for Mamiya Press	Installed on the camera back
	Mamiya RB67	Installation of holders for Mamiya Press in horizontal format	Installed on the camera back with the P adapter attached
M adapter (vertical)	Mamiya RB67	Installation of holders for Mamiya Press in vertical format	



M adapter (horizontal)

M adapter (vertical)

■ Attaching to and detaching from the Mamiya RB67

M adapter (horizontal) and M adapter (vertical)

Attaching

In a condition that the red mark on the adapter is facing toward the top of the camera body and the adapter is placed on the P adapter, secure the adapter by fully sliding up the P lock lever (3) on both sides of

the P adapter.

Detaching

Detach the adapter by depressing the P lock lever (3) on both sides.




P adapter

Note

When using the M adapter, safety mechanisms regarding the camera back (such as double-exposure warning device) will not function.

■ Attaching to and detaching from the Mamiya Universal

M adapter (horizontal)

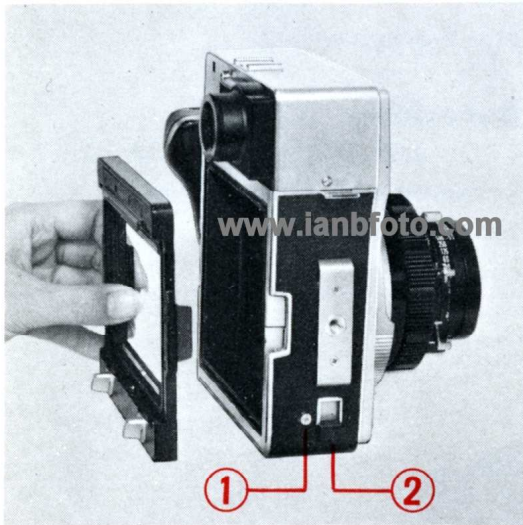

Attaching

1. Press down the locking slide (2) on both sides while pushing in the lock button (1).
2. Attach the M adapter on the camera body and securely push up the locking slide (2) on both sides. In this case, align the red mark on the adapter with the red mark on the camera body.

Detaching

1. Detach the adapter by pressing down the locking slide (2) on both sides while the lock button (1) is pushed in.

How to install holders for Mamiya Press

1. Align the flattened edges of the adapter lock knob (4) in two portions in parallel with the frame edge.
2. Insert the upper end of the

holder in the adapter groove (5); then press in the holder lower end.

3. Secure the holder by turning the lock knob in two portions more than 90°.




Mamiya
CAMERA CO., LTD.