


# Mamiya RZ67 G Adapter RZ


Instructions

[www.ianbfoto.com](http://www.ianbfoto.com)

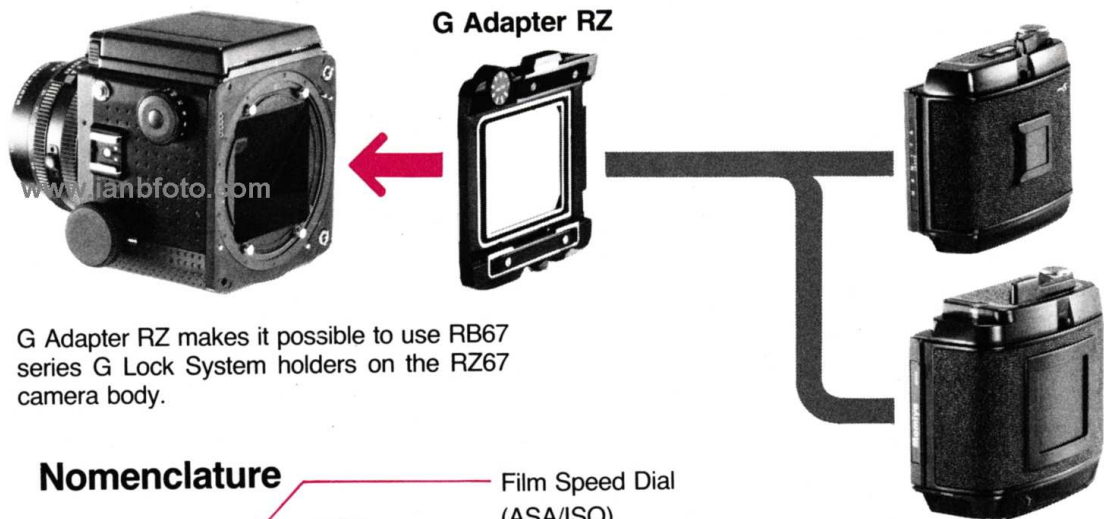

G Adapter RZ makes it possible to use RB67 series G Lock System holders on the RZ67 camera body.

## Nomenclature

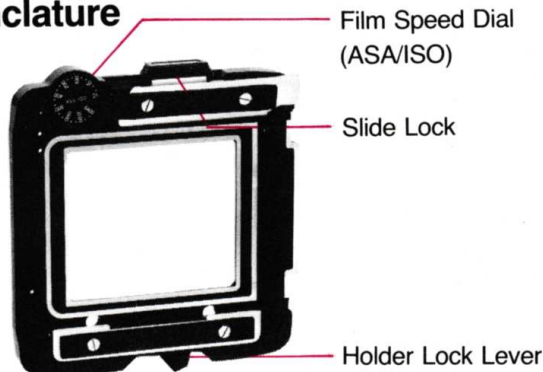

**Mamiya RB67  
Roll Film Holders  
(and other G Lock System  
accessories)**

## Attaching Adapter to Camera Body

---



1. When viewed with Film Speed Dial at the top and Holder Lock Lever at the bottom, make sure the Holder Lock Lever of the adapter is moved completely to the right.
2. Align the orange circle of the Revolving Ring (found at the rear of the camera) with one of the two white index marks on the camera body.
3. Hold the adapter so that its orange circle is at the same position as the one on the Revolving Ring, and fit the adapter onto the camera back, taking care that the four Camera Back Mount Pins fit into the four openings of the adapter.
4. Lock the adapter on the camera body by moving the Holder Lock Lever to the left as far as it will go (see illustration).


2

## Attaching G Lock System Holders

---



1. Move the Slide Lock of the G Adapter (found to the right of the Film Speed Dial) completely to the right.
2. Fit the bottom of the RB Roll Film Holder into the retaining plate of the adapter, and while gently pressing the upper portion of the holder against the top of the adapter, move the Slide Lock as far as it will go to the left.
3. Set the Film Speed Dial of the adapter to the speed of the film contained in the holder.
4. Set the R-M Lever on the camera body to "M". Were the R-M Lever to be kept at its normal, central position, it would not be possible to release the shutter and a red warning lamp would illuminate in the viewfinder.

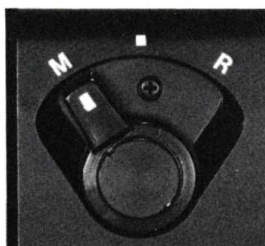

3



## Precautions when Using RB Series Holders

1. Film must be wound by the Film Advance Lever of the RB Roll Film Holder.
2. After each exposure, operate the Film Wind-Stop Release Lever manually and advance the film to the next frame.
  - When an RB Holder is used on the RB67, the red band beside the Exposure Counter appears after releasing the shutter; however, when used on the RZ67 it does not appear until the Film Wind-Stop Release Lever is moved.
3. When RB Holders are used on a RZ67 body, the following safety features do not function, so exercise caution.
  - Even if the Dark Slide is not withdrawn, the shutter can be released and the red warning lamp will not illuminate.
  - Even if the Dark Slide is not inserted in the holder, the holder can be removed from the camera body by unlocking the Holder Lock Lever.

## Removal

### Removing an RB Holder from the G Adapter

- Merely move the Slide Lock at the top of the adapter completely to the right.

### Removing the G Adapter from the Camera Body

- Move the Holder Lock Lever at the bottom of the adapter completely to the right and remove adapter.
- When removing a G Adapter with holder attached, hold the adapter against the holder securely to prevent the adapter from falling.
- If both the upper Slide Lock and lower Holder Lock Lever were simultaneously moved to the right, the RB Holder and G Adapter would be unlocked at the same time, making it possible to accidentally drop the adapter; therefore, exercise caution whenever removing the combination of adapter and holder.

  
**Mamiya**  
CAMERA CO., LTD.

