

## **IMPORTANT! PLEASE READ BEFORE UNPACKING.**

The camera comes packed with a neckstrap, a battery and a little plastic part, placed in the plastic bag with the battery. Please save this part. It is needed if you ever want to use RB finders on your camera. (See page 40 in instruction manual). Also a front protective cover which you remove by turning it counter clockwise and a rear protective cover which you remove by lifting it upward. Please save them and always use them.

The camera is shipped with the mirror in the up (uncocked) position. A foam plastic plug is in the lens opening as another mirror protection. Please remove and discard it.

The battery must be inserted before you can operate the camera. (See page 11)

To attach a lens to the camera, you must first remove its rear protective cover which is locked to the lens. To unlock you must turn its rear mounting ring. Also please read the instruction sheet packed with each lens regarding shutter cocking position. (Also see page 12)

To attach the rollfilm holder you must first remove its rear protective cover, by moving the lock release lever on the bottom to the left.

To try out the camera outfit without film, please set the MR lever on the right side the camera to "M".

There are many safety interlocks between camera body, lenses and roll film holders. Please study the instructions to understand them. When everything is properly set, the camera will function smoothly. Never force any control.