


Angle Finder FA401 アングルファインダー FA401

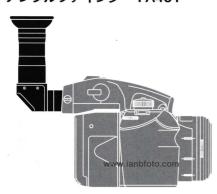

English Instructions 日本語 使用説明書

⚠ CAUTION

- Do not look at the sun or other strong light sources through the Angle Finder while on or off the camera's eyepiece. Doing so could impair your vision.
- · Do not lift the camera by holding the angle finder. Doing so could damage the angle finder mount or result in the camera falling, causing injury or damage to the both

Mamiya

100% Recycled Paper


Mamiya-OP Co., Ltd.

314350-TC-02JE


Thank you for purchasing the Mamiya Angle Finder FA401. The Angle Finder gives you the ability to view the image through the camera at a right angle to the camera's eyepiece. It can be used for shooting at low angles, macro photography and copy work. When mounted on the camera, the finder can be rotated 360°, perpendicular to the camera's viewfinder, allowing for photography at positions other than eye-level. The view through the Angle Finder shows the same amount of information from the focusing screen as you would see without the finder mounted on the camera. Diopter adjustment is integral to the Angle Finder, with a range of -5 to +3 to accommodate near- or farsighted vision (with the standard diopter supplied with the Mamiya 645 AF)

Mounting the Angle Finder FA401


- 1. Release the Angle Finder locking lever by pushing it away from the eyepiece mount, then press and slide the angle finder's mount up along the camera's viewfinder's eyepiece frame until it stops. (Fig. 11 and 2)
- 2. Press the locking lever into the eyepiece mount. Once you hear a click, the lever is locked. (Fig. 3)

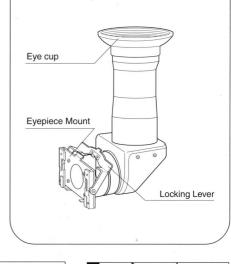

Names of parts

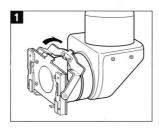





Removing the Angle Finder FA401

Lower the locking lever, then press the Angle Finder down to detach it from the viewfinder's eyepiece frame.

Specifications

Magnification

: 1x (full view of all information on focusing screen)

Diopter adjustment range:

-5 to +3 (when used with standard diopter lens supplied with Mamiya 645 AF)

Lens construction

: 7 elements in 5 groups, 1 prism (including dust protection glass)

Image

: Vertically and horizontally correct


Weight : 137 g

Handling precautions

- The angle finder does not have a waterproof structure. If it should get wet, wipe off the water with a dry, clean cloth. If the angle finder is exposed to salt water spray, wipe it off with a clean, damp, thoroughly wrung-out cloth.
- · Do not expose the magnifier to chemicals or gases for long periods of time.
- To clean, wipe gently with a soft, dry cloth. Do not use solvents. Exposure to such will damage the surfaces of
- If there is dirt or dust on the lens surface or the viewfinder, remove it with a blower or sweep it off gently with a lens brush.
- If there are fingerprints or dirt on the lens surface or the viewfinder, wipe it off gently with a piece of clean, soft gauze. If this does not remove the debris, or if mold is present, contact your nearest Mamiya service center.
- · Do not attempt to disassemble the magnifier or modify it in any way. If you need assistance with this accessory, please contact the nearest Mamiya service center.

645AF

アングルファインダー FA401 Angle Finder FA401

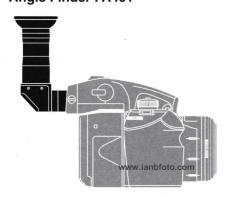

日本語 使用説明書 English Instructions

注 意

- ●レンズを透かして太陽や強い光源を直接見ないでください。視力障害の原因となります。
- ●アングルファインダーを持ってカメラを持ち上げないでください。アングルファインダー取り付け部の破損およびカメラの落下による負傷または製品の破損の原因になります。

Mamiya

100% Recycled Paper

Mamiya-OP Co.,Ltd.Printed in Japan仕様外製は品質向上のために予告なく変更する場合があります。314350-TC-02JE


このたびは、マミヤ製品をお買い上げいただきありがとうございました。


アングルファインダーは、映像を直角に変えて見ることができますので、ローアングル、接写、複写などの撮影に使用します。カメラに取り付けたまま360度回転しますので、自由な角度で撮影が可能です。ファインダーは明るく、倍率は等倍です。カメラの視度調整を併用すると、近視の人も、遠視の人も映像をはつきり見ることができます。


取り付けかた


1.アングルファインダーのロックレバーを矢印方向に倒して、取り付け部をカメラのファインダー接眼枠に沿って、止まる位置まで押し上げて取り付けます。(図1, 2)

2.ロックレバーを取り付け部に押し込むと、カチッと音がしてロックされます。(図3)

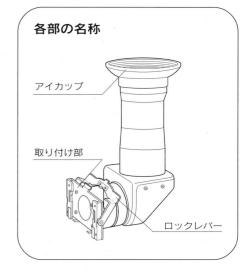

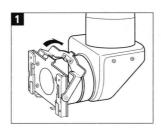





取り外しかた

ロックレバーを倒し、アングルファインダーを押し 下げて、ファインダー接眼部から取り外します。

仕 様

倍率 : 1倍(等倍)

視度調整可能範囲 : $-5\sim+3$ ディオプター

(視度補正レンズ併用)

レンズ構成 : 5群7枚

プリズム1(保護ガラス含む)

 映像
 : 上下左右正像

 重量
 : 137 g

取り扱い上の注意

- ●アングルファインダーは、防水構造になっていません。ぬれたときは、乾いたきれいな布で拭いてください。また、潮風にあたったときは固く絞ったきれいな布で拭いてください。
- ●ナフタリンやホルマリンなど化学薬品のガスが発生する場所に長期間放置しないでください。
- ●お手入れは、柔らかい乾いた布で軽く拭く程度に してください。溶剤は使用しないでください。溶剤 を使用すると変色することがあります。
- ●レンズの表面やファインダーなどに、ゴミやほこりが付いたときは、ブロワーで吹き飛ばすか、レンズ用のブラシで軽く払ってください。
- ●レンズの表面やファインダーに指紋や汚れなどが 付いたときは、きれいな柔らかいガーゼで指紋や 汚れを軽くふき取ってください。汚れがとれない ときやカビが発生した場合は、最寄りの営業所ま たは、サービスセンターにご相談ください。
- ●アングルファインダーの分解・改造は絶対にしないでください。