



PRISM FINDER S

www.ianbfoto.com

INSTRUCTIONS

The Prism Finder S is one of several optional interchangeable finders available for the Zenza Bronica SQ.

The Prism Finder S is a light-weight and compact eye-level finder, incorporating a total reflexion prism and showing a very bright, erect image which is not reversed laterally, thus making it an ideal finder for general use. Furthermore, even eyeglass users are able to observe the field of view from edge to edge because of the high eyepoint.

It is recommended that Prism Finder S be used in combination with Speed Grip S for general eye-level photography.

Specifications

Magnification:

0.75X (with standard 80mm lens)

Finder field:

52.3 x 52.3mm (94% x 94%)

Eyepiece diopter correction:

Standard eyepiece lens -1.50 diopters; corrections from -4.50 to +1.50 diopters possible by exchanging lens.

Dimensions and weight:

71mm (width) x 134mm (length) x 56mm (height); 310 grams.

1 Attachment and Removal of the Finder




1) The finder attached to the camera, such as Waist-Level Finder S or the finder cover, can be removed very easily. Simply depress the finder release button and, at the same time, slide the finder to the rear where it can be lifted off.




2) To attach Prism Finder S, align the front end of the finder with the front end of the finder frame (the shiny square frame on top of the camera body). Then, gently lower the finder and, when well seated, slide forward until it locks.

3) The Prism Finder S is, of course, detached in the same manner, as explained in 1) preceding.


2 Exchanging the Eyepiece Lens

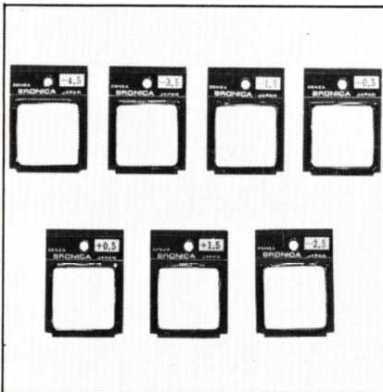

1) The standard eyepiece lens supplied with the Prism Finder S has a power of -1.50 diopters. When found unsuitable, however, it can be exchanged for one of six optional lenses with powers of -4.50 , -3.50 , -2.50 , -0.50 , $+0.50$ and $+1.50$ diopters.

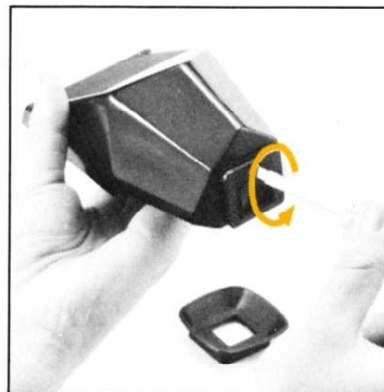

2) To exchange eyepiece lens, first, detach the eyecup. Then, unscrew the setscrew on the eyepiece lens frame and it will be possible to remove the lens together with the frame.

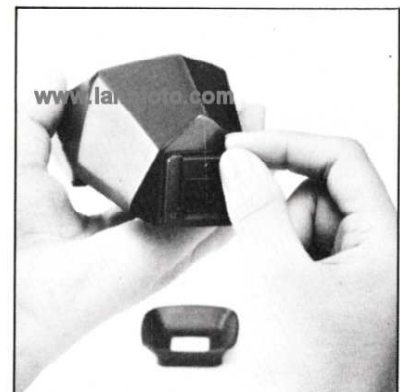

3) To attach the replacement eyepiece lens, simply place the bottom edge of the frame into position and then screw in the setscrew at the top of the frame.

4) Finally, replace the eyecup.

For Mamiya and Bronica medium format cameras and accessories go to : www.ianbfoto.com



BRONICA CO., LTD.

Futaba Bldg.,
2-2 Shin-Ogawamachi
Shinjuku-ku, Tokyo 162, Japan
Tel: (03) 267-0211
Telex: 0232-2096 BRONC J
Cable: BRONICA TOKYO