

Zenza  
**BRONICA**  
**ETRS**


[www.ianbfoto.com](http://www.ianbfoto.com)

INSTRUCTIONS FOR

THE QUICK TRIPOD RELEASE MOUNT-E

The Quick Tripod Release Mount-E is a very important and valuable accessory in the ETRS System of Photography.


The Quick Tripod Release Mount-E can be used for quick attachment/detachment of the Zenza Bronica ETRS to the tripod.

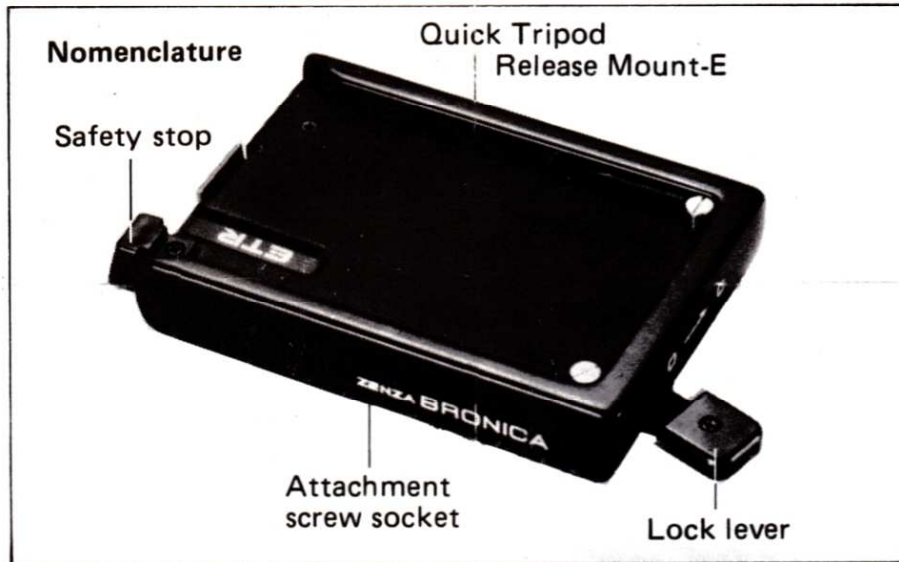

**Attachment of the Camera**

- (1) For taking pictures, attach the Quick Tripod Release Mount-E directly on the tripod, by screwing the tripod screw into the attachment screw socket. Then, insert the tripod mount shoe on the base of the body into the accessory's open grooved section, until it stops.

\* The camera can be inserted from either end.

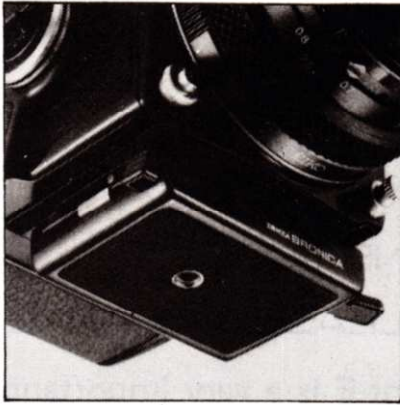

- (2) When pushed in fully, the safety stop will spring up and lightly lock the camera body.



- (3) Finally, slide the lock lever towards "C" (for close), as far as it will go, which will lock the camera body securely to the accessory.



#### **Detachment of the Camera**

Unlock the lock lever by sliding it towards "0".

Next, depress the safety stop and, at the same time, pull the camera body away from the Quick Tripod Release Mount-E.

## **BRONICA CO., LTD.**

Futaba Bldg.,  
2-2 Shin-Ogawamachi  
Shinjuku-ku, Tokyo 162, Japan  
Tel: (03) 267-0211  
Telex: 0232-2096 BRONC J  
Cable: BRONICA TOKYO